


ASSEMBLY INSTRUCTION FOR 41" END PANEL & MODESTY PANEL FOR PLT TOP



HARDWARE

						
CAM LOCK 4 Pcs	KLIX CAM 4 Pcs	HOUSING CAP (SHORT) 4 Pcs	ADJUSTABLE GLIDE 4 Pcs	6 HOLE L-BRACKET 6 Pcs	SCREW #6 x $\frac{5}{8}$ " 36 Pcs	M4 x 65 ALLEN-KEY 1 PC

COMPONENTS

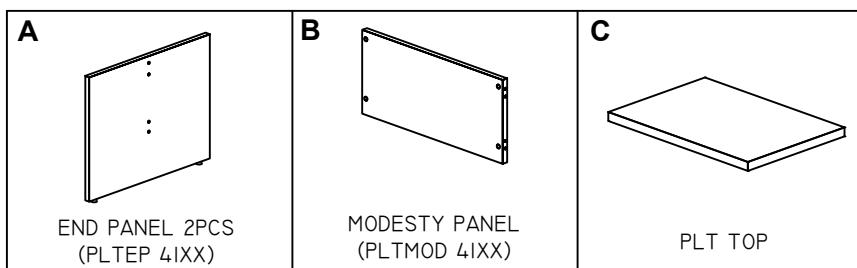

KLIX CAM INSTRUCTIONS

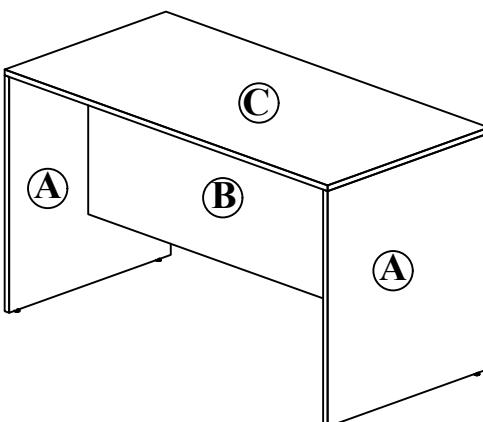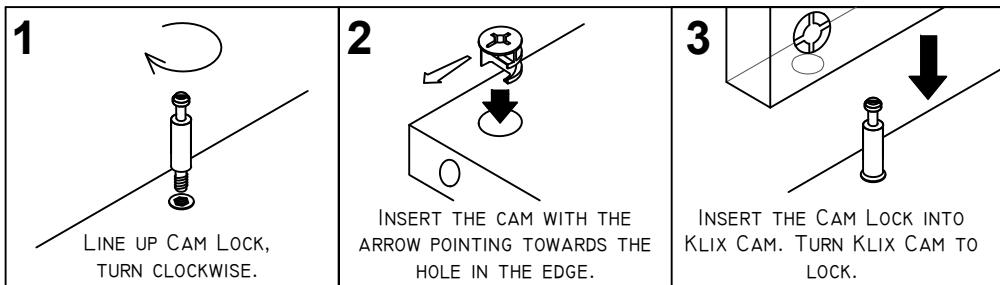

IMPORTANT NOTE :

- Place all wooden parts on a clean, smooth surface to prevent the parts from being scratched.
- Check that you have all parts and hardware.
- Remove all wrapping materials, including staples & packing straps before you start to assemble.
- Do not tighten any screws or bolts until the unit is completely assembled.
- Keep all hardware parts out of reach of children.

